

KØKKENCHEF



INSTRUCTION MANUAL

AIR FRYER

10034393

INTRODUKTION

Mange tak fordi du har valgt et produkt fra Epiq. Dermed har du erhvervet et kvalitetsprodukt som opfylder alle gældende krav til præstation og sikkerhedsstandarder i EU. For at sikre en korrekt behandling og en lang levetid anbefaler vi, at du overholder nedenstående anvisninger.

Du bedes læse vejledningen og især sikkerheds anvisningerne omhyggeligt igennem, inden du tager apparatet i brug. Opbevar denne betjeningsvejledning, og overlad altid kun produktet til andre sammen med betjeningsvejledningen.

GENERELLE SIKKERHEDSFORANSTALTNINGER

- Forkert brug af produktet kan medføre personskade og beskadige apparatet.
- Anvend kun produktet til det, det er beregnet til. Producenten er ikke ansvarlig for skader, der opstår som følge af forkert brug eller håndtering.
- Anbring altid produktet på et tørt, plant og stabilt underlag på god afstand af bordkant eller lignende.
- Produktet er udelukkende beregnet til husholdningsbrug. Produktet må ikke anvendes til erhvervsbrug.
- Produktet må kun sluttes til 220-240V, 50/60Hz.
- Produktets motordel/elektronik, ledning og stikket må ikke nedsænkes i vand, og der må ikke trænge vand i motordel/elektronik.
- Rør aldrig ved produktet, ledningen eller stikkontakten med våde eller fugtige hænder.
- Udsæt ikke produktet for direkte sollys, høje temperaturer, fugt, støv eller ætsende stoffer.
- Forlad aldrig produktet, når det er tændt.
- Når produktet er i brug, bør det holdes under konstant opsyn.
- Når apparatet bruges skal børn der opholder sig i nærheden af den altid holdes under opsyn.
- Børn må ikke lege med apparatet.

- Produktet kan indeholde skarpe dele og bør derfor opbevares utilgængeligt for børn.
- Brug kun tilbehør, der følger med produktet eller er anbefalet af producenten.
- Produktet må ikke bruges af personer med nedsat følsomhed, fysiske eller mentale handicap, eller personer, som ikke er i stand til at betjene produktet, medmindre de overvåges eller instrueres i brugen af en person, som er ansvarlig for deres sikkerhed.
- Apparatet må bruges af børn på 8 år eller derover og personer med reducerede fysiske, sensoriske eller mentale evner, eller som mangler erfaring og viden, hvis de er under opsyn eller har modtaget instruktion i sikker brug af apparatet og forstår de involverede farer.
- Hold apparatet og ledningen uden for rækkevidden af børn under 8 år.
- Rengøring og vedligeholdelse må ikke udføres af børn med mindre de er ældre end 8 år og under opsyn.

LEDNING OG STIK

- Lad ikke ledningen hænge ud over bordkanten.
- Hold ledningen og produktet væk fra varmekilder, varme genstande og åben ild.
- Tag stikket ud af stikkontakten før rengøring, og hvis apparatet ikke er i brug. Undlad at trække i ledningen, når du tager stikket ud af stikkontakten, men tag fat om selve stikket.
- Sørg for, at ledningen er rullet helt ud.
- Kontrollér jævnligt, om ledningen eller stikket er beskadiget, og brug ikke produktet, hvis dette er tilfældet, eller hvis det har været tabt på gulvet, tabt i vand eller er blevet beskadiget på en anden måde.
- Hvis produktet, ledningen eller stikket er beskadiget, skal produktet efterses og om nødvendigt repareres af en autoriseret reparatør. Forsøg aldrig at reparere produktet selv. Kontakt købsstedet, hvis der er tale om en reparation, der falder ind under reklamationsretten. Hvis der foretages uautoriserede indgreb i produktet, bortfalder reklamationsretten.

REKLAMATIONSRETEN GÆLDER IKKE:

- Hvis ovennævnte ikke iagttages.
- Hvis der har været foretaget uautoriserede indgreb i apparatet.
- Hvis apparatet har været misligholdt, udsat for en voldsom behandling eller lidt anden form for overlast.

BORTSKAFFELSE AF PRODUKTET

Brugte produkter må ikke smides i husholdningsaffaldet. Iht. lovfor-
skrifterne skal det udtjente produkt bortskaffes på ordentlig vis.

Derved genanvendes de brugbare materialer, og miljøet skånes.



Nærmere informationer fås hos den ansvarlige kommunale myndig-
hed eller det lokale bortskaffelsesfirma. Produktet er forsynet med
følgende logo:



PRAKTISKE TIPS

- Fjern stegekurven og omrøringspadlen, før du bruger apparatet første gang, og rengør delene med et rengøringsmiddel. Sæt delene tilbage i airfryeren efter rengøringen, og indstil timeren til 10 minutter for at opvarme apparatet og fjerne lugten fra indpakningen/transporten.
- Apparatet kan udsende lidt røg eller lugt, når det bruges første gang. Det er normalt.
- Brug kun anbefalet originalt tilbehør.
- Kontrollampen i apparatet styres af et varmerør. Når apparatet når den indstillede temperatur, holder varmerøret op med at varme, og kontrollampen slukkes midlertidigt. Når temperaturen falder til under den indstillede temperatur, tænder varmerøret igen, og kontrollampen lyser på ny. Det er normalt.
- Brug ikke beholdere, som ikke er varmebestandige, i airfryeren, som fx plast eller papir.
- Brug ikke glas, keramiske tallerkener eller låg.
- Der må ikke være for meget vand i airfryeren. Hvis der er for meget vand i airfryeren, kan dampe ramme delene over airfryeren og forårsage strømlækage. Tag stegekurven i airfryeren ud, og læg den i vand, når den skal rengøres. Fyld ikke vand i stegekurven, mens den er anbragt i airfryeren.
- Apparatets overflade bliver meget varm under brugen og er fortsat varm i nogen tid efter brugen. Temperaturen ved luftudtaget kan også være meget høj. Rør eller flyt derfor ikke apparatet for at undgå fare.

DELE OG DERES FUNKTION

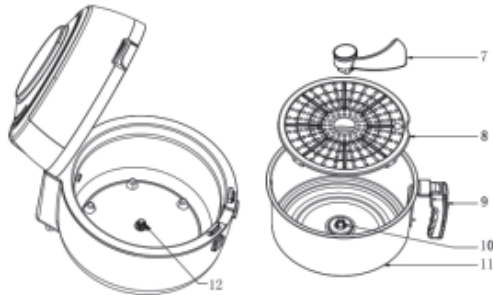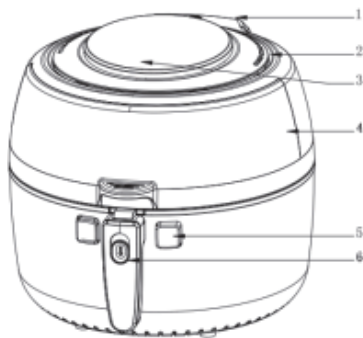

NR.	Beskrivelse	Funktion
1	Luftindtag	Suger kold luft ind til afkøling af apparatet
2	Luftudtag	Udleder varm luft
3	Kontrolpanel	Indstilling af temperatur, tilberedningstid, start/annullér
4	Gennemsigtigt vindue	Bruges til at kontrollere madens tilberedningstilstand
5	Knap til åbning	Tryk på de to knapper samtidig med begge hænder. Den øverste del åbner op, og du kan tage mad ud af eller lægge mad i airfryeren

D. Start/annullér

Tryk på ikonet "Start/annullér"  på kontrolpanelet, når du har indstillet temperatur og tid for tilberedningen af maden. Skærmen viser hvert 5. Sekund skiftevis temperaturen og tiden (fra starttidspunkt)

Sluk airfryeren manuelt, hvis du skal slukke den under tilberedningen. Det gør du ved at trykke på knappen "Start/annullér" på kontrolpanelet. Hvis du skal fortsætte tilberedningen, skal du følge ovennævnte trin vedrørende indstilling.

E. Omrøring

Sæt omrøringspadlen i, når du skal bruge omrøringsfunktionen. Luk toplåget, og justér temperatur og tid. Tryk på ikonet "Start/annullér" , og tryk derefter på knappen "Omrøring". Kontrollampen for omrøring tænder og lyser konstant. Omrøringspadlen fjernes sammen med stegekurven, når maden er tilberedt. Vær forsigtig. Der er fare for skoldning på grund af høj indvendig temperatur under brug

F. Funktionen forvarmning

Hvis du skal bruge funktionen forvarmning, skal du først indstille tilberedningstid og temperatur. Tryk derefter på knappen "Omrøring". Kontrollampen for forvarmning tænder. Tryk derefter på knappen "Start/annullér". Airfryeren kører i fem minutter og opretholder forvarmningstilstanden. Læg maden i stegekurven, når airfryeren er foropvarmet. Luk toplåget på airfryeren. Tryk igen på knappen "Start/annullér". Airfryeren starter.

Bemærk:

- a.Når maden er tilberedt, hører du fem klik som tegn på, at tilberedningstiden er udløbet. Skærmen viser "00 min.". Blæseren stopper efter 45 sekunder. Tag stegekurven ud af airfryeren, når maden er tilberedt, og placér den på en varmebestandig overflade. (Bemærk: Hvis du ikke forlader hovedskærmen, udsender brummen en lyd hvert 2. minut).
- b.Når du åbner apparatet, afbrydes omrøring, blæser og varmerør. Kontrolpanelet fungerer fortsat også efter, at låget er lukket.

BRUGSANVISNING

★Før første brug

- A. Fjern al emballage.
- B. Tag risten og stegekurven ud, og fjern indpakningsposerne.
- C. Rengør risten og stegekurven med varmt vand. Tør inder- og ydersiden af airfryeren af med en våd klud fugtet med et rengøringsmiddel. Lad airfryeren tørre helt, før du bruger den.
- D. Placér airfryeren på en plan og stabil overflade.
- E. Sørg for, at der er tilstrækkelig plads rundt om airfryeren, så den udvendige overflade er mindst 10 cm fra andre genstande. Anbring ikke genstande foran luftudtaget.

Bemærk:

Før første brug skal du forvarme airfryeren i fem minutter for at fjerne restolie og røg.

Apparatet kan udsende en dårlig lugt ved første brug. Det er normalt.

★Betjening:

- A. Anbring risten i stegekurven, og sæt den ind i stegerummet. Sæt omrøringspaddlen på akslen, hvis du skal bruge omrøringsfunktionen.
- B. Læg maden i stegekurven, og kontrollér, at maden ikke stikker op over kanten af stegekurven.
- C. Luk airfryeren, og sæt stikket i stikkontakten. Kontrolpanelet udsender en lyd, og kontrollamperne lyser op.
- D. Tryk på knappen "Funktion", vælg brugertilstand eller standardmenutilstand.
- E. Tilberedningstid og temperatur kan justeres i brugertilstand. Tilberedningstid og temperatur er forhåndsindstillet i standardmenuen.
- F. Når indstillingen er udført, skal du trykke på knappen "Start/annullér".
- G. Tryk efter behov på knappen "Omrøring" for at starte omrøringsfunktionen. Kontrollampen for omrøring lyser konstant.
- H. Tryk på knappen "Start/annullér", hvis du skal stoppe tilberedningen før udløbet af tilberedningstiden.
- I. Der lyder en brummer, når maden er færdig. Tryk på knappen til åbning af airfryeren, og tag maden ud. Det tilrådes at tage risten, stegekurven og omrøringspaddlen ud sammen, når der tilberedes fedtholdig mad, for at undgå at spilde fedt. Vær opmærksom på faren for skoldning, når du bruger airfryeren.

Tips:

- ✘ Det anbefales at forvarme airfryeren i fem minutter før brug for at opnå et bedre resultat af tilberedningen.
- ✘ Visse madvarer kan pakkes ind i stanniol for at opnå et bedre resultat af tilberedningen.
- ✘ Tilberedningstiden kan justeres efter dine egne præferencer. Før kontrol med maden gennem vinduet for at undgå, at maden brænder på.
- ✘ Rengør risten og stegekurven efter hver brug for at undgå, at der udvikles røg, eller madens udseende påvirkes næste gang, at airfryeren bruges.

RENGØRING OG PLEJE

- A. Træk stikket ud af stikkontakten, og vent, indtil airfryeren er afkølet helt, før den rengøres.
- B. Tør eventuelt fedt på siden af airfryeren af med en blød, fugtig klud fugtet med lidt mildt rengøringsmiddel.
- C. Rist, stegekurv, omrøringspaddel og andet tilbehør kan tages ud og rengøres med vand.

- D. Rengør ikke apparatet ved at sænke det ned i vand eller anden væske for at undgå elektrisk stød og funktionsfejl.
- E. Vent efter rengøringen, indtil tilbehøret er tørt, og læg det et køligt og tørt sted.

VEJLEDNING I FEJLFINDING

Problem	Mulig årsag	Løsning
Airfryeren virker ikke	Airfryeren er ikke tilsluttet strømmen	Sæt stikket i en stikkontakt med jordforbindelse
	Airfryeren startede ikke	Tryk på start på kontrolpanelet
Ingredienserne i airfryeren er ikke helt kogte	Der er anvendt for mange ingredienser	Tilbered ingredienserne ad flere gange
	Tilberedningstemperaturen er for lav	Indstil den krævede temperatur med temperaturkontrolknappen
	Tilberedningstiden er for kort	Indstil en længere tilberedningstid
Maden er tilberedt uensartet	Maden er tilberedt uden omrøring	Maden skal omrøres
Stegte snacks er ikke sprøde	Brug ikke almindelige snacks	Brug snacks,, der er beregnet til tilberedning i en ovn, eller smør lidt olivenolie på snackene
Stegekurven kan ikke skubbes helt ind i airfryeren	Håndtaget på stegekurven er ikke korrekt anbragt	Sæt stegekurven korrekt i. Justér højden af madvarerne, og brug den nødvendige mængde af ingredienser
	Der er ingredienser i airfryeren	
	Der er for meget mad i stegekurven, der ikke kan lukkes	
Der kommer hvid røg ud af airfryeren	Du steger fedtholdig mad	Det er normalt, når du tilbereder fedtholdige ingredienser i en airfryer. Større mængder fedtstof kan afgive røg
	Risten indeholder fedtresten fra sidste brug	Sørg for at rengøre risten ordentligt efter hver brug

Omrørings- padlen kører ikke	Omrøringspadlen er ikke korrekt tilsluttet motoren	Tryk på knappen, og sæt den på igen
	Omrøring starter ikke	Kontrollér omrøringsfunktionen
	De tilberedte ingredienser er for store og blokerer omrøringspadlen	Tilpas størrelsen på ingredienserne, og start igen
Skærmen viser "E01"	Der er fejl i t emperaturmåleren	Ret henvendelse til købsstedet.
Skærmen viser "E02"	Temperaturføleren er kortslettet	Ret henvendelse til købsstedet.
Blæseren stopper ikke når tilberedningen er slut eller annulleres	Blæseren kører i 45 sekunder efter slukning for at beskytte airfryeren	Det er normalt. Blæseren stopper automatisk efter slukning

TEKNISKE DATA

Artikelnr. 10034393

220-240V, 50/60Hz

Maks. effekt: 1800 watt

INTRODUCTION

Thank you for choosing a product from Epiq. You have acquired a quality product which meets all applicable performance and safety standards in the EU. In order to ensure proper treatment and a long product life, we recommend that you comply with the instructions below.

Please read the manual and especially the safety instructions carefully before using the device. Keep this manual and provide it for referral along with the product when others are using it.

GENERAL SAFETY INSTRUCTIONS

- Improper use of the product can cause personal injury and damage.
- Only use the product for what it is intended. The manufacturer is not liable for damages arising from improper use or handling.
- Always place the product in a dry, flat and stable surface well away from table edge or similar.
- The product is intended for household use only. The product is not for professional use.
- The product may only be connected to 220-240V, 50/60Hz.
- The product engine/electronics, cord or plug cannot be submerged in water, and no water may get in contact with the engine/electronics.
- Never touch the product, cord or plug with wet or damp hands.
- Do not expose the product to direct sunlight, high temperatures, humidity, dust or corrosive substances.
- Never leave the product when it is turned on.
- When the product is in use, it should be kept under constant supervision. Children should always be supervised when using the product to ensure that they do not play with the product. The product is not a toy.
- The product may have sharp parts and must, therefore, be kept out of reach of children.

- Only use the accessories that come with the product or that are recommended by the manufacturer.
- The product must not be used by people with reduced sensitivity, physical or mental disability, or people who are not able to operate the product unless they are supervised or instructed by a person responsible for their safety.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Keep the appliance and its cord out of reach of children less than 8 years of age.
- Cleaning and user maintenance shall not be made by children without supervision.

CORD AND PLUG

- Do not let the cord hang over the edge.
- Keep the cord and the product away from heat sources, hot objects and open flames.
- Unplug the power cord before cleaning and if the appliance is not in use. Do not pull the cord when removing the plug from the socket, rather grasp the plug itself.
- Make sure that the cord is fully extended.
- Check regularly that the cord and the plug are not damaged and do not use the product if this is the case, or if it has been dropped on the floor, dropped in water or damaged in another way.
- If the product or plug is damaged, the product must be inspected and, if necessary, repaired by an authorised repairer. Never try to repair the product yourself. Please, contact the store to see if there is a repair that falls under warranty. Tampering of the product will void the warranty.

RULES OF COMPLAINTS THE WARRANTY DOES NOT APPLY:

- If the above is not observed.
- If there has been unauthorised intervention of the device.

- If the appliance has been mishandled, subjected to rough treatment or some other form of damage.

PRODUCT DISPOSAL


Used product should not be disposed as household waste. According to legislation, the product should be disposed of properly so that the materials can be recycled in an environmentally friendly manner. Further information is available from the responsible local authority or local disposal company. The product is equipped with the following logo:



HANDY HINTS

- Please take the frying basket and stirring blade out before using the appliance for the first time and clean the parts using cleaning agent, after cleaning the parts put then back into the air fryer and set the timer for 10 minutes to preheat to eliminate remaining odor in the process of packaging/transport.
- It may emit slight smoke or odor when using it for the first time, which is normal.
- Use original accessories that are recommended.
- The indicator light in the appliance is generated by a heating tube, when the appliance reaches the set temperature, the heating tube will stop heating and the indicator light will temporarily turn off, when the temperature is lower than the set temperature, the heating tube will turn back on and the indicator light will turn back on, which is normal.
- Do not use heat-labile containers such as plastic or paper in the air fryer.
- Do not use glass, ceramic plate, or cover.
- The air fryer should not be too full of water. If the water is too full, steam can evaporate directly into the parts above the air fryer, causing electrical leakage. The pan of the air fryer needs to be taken out and placed in water to clean, rather than filling the pan with water.
- The appliance surface gets very hot during use and stay hot for some time after use. The air outlet temperature may also be very high, therefore do not touch or move, the appliance to avoid danger.

PARTS AND ITS FUNCTION

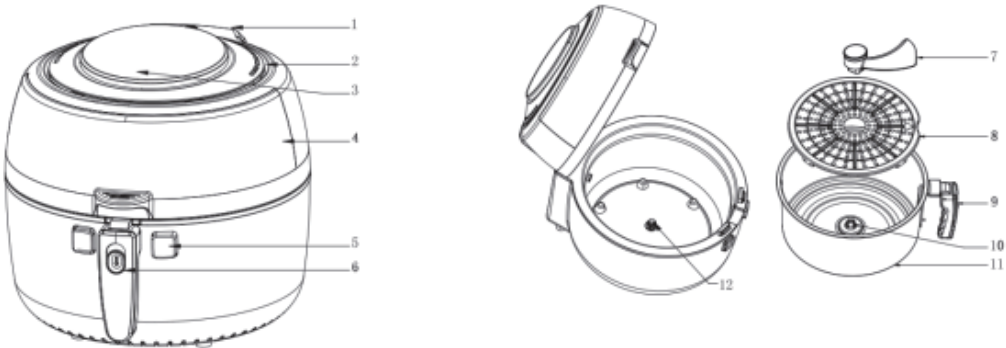

S.N.	Name of parts	Function
1	Air inlet opening	Sucking cold blast air for cooling down the appliance
2	Air outlet opening	Air outlet opening for eliminating hot air
3	Control panel	Setting for temperature, time, start/cancel
4	Transparent window	Using to observe the food baking status in it
5	Opening button	Press these two buttons with both hands at the same time then the entire upper part will open to let you fetch and put food

6	Handle button	When holding the handle, slide it in the direction of the palm of the hand while at same time pushing the knob downward to release the fold of the knobs.
7	Stirring blades	Using to stir the foods to ensure it is heated evenly.
8	Grill	For carrying foods
9	Handle of the pot	Folding handle can be used to operate the pot.
10	Propeller shaft	Using to delivery power of stirring shaft to stirring blade
11	Frying pot	Using to place foods and other accessories, when installation and place please use hot temperature mitts, to avoid danger of scalding.
12	Stirring shaft	Using to provide power of stirring.

OPERATION PANEL AND ITS FUNCTION DESCRIPTION

Functional keys corresponding menu options

Tem.“+”,Tem.“-” Time“+”,Time“-”

Function selection, start/cancel, stirring

WIFI indicator light, stirring indicator light, subscribe indicator light, time indicator light, temperature indicator light

Hint: The "start" and "cancel" functions of the air fryer are set on the same icon . 

A. Function menu: the function menu key has the default mode and the independent mode. The corresponding diet temperature and time in the default mode are all set, and the ingredients are prepared according to the amount and method of the diet. Finally press the "start / cancel"  icon on the panel;

B. Adjusting temperature

After cooking mode selected, determine the temperature required for cooking. Please use the temperature adjustment button to adjust to the required temperature. There are two icons of "+" and "-" on the operation panel, each one of them is pressed, then the temperature setting value increases or decreases by 5 centigrade. When one of the icons is pressed, the temperature will increase or decrease rapidly at 5 centigrade. (Temperature adjustment range: 80-200 centigrade, recyclable)

Note 1: if the product starts to run and is heated, it can also adjust the time and temperature.

C. Adjusting time:

Determine the time required for cooking food. Please use the time adjustment button to adjust the time required. There are two icons of "+" and "-" for time adjustment on the operation panel. When each icon is pressed, the time setting value increases or decreases by 1 minute. When one icon is pressed, the time increases rapidly or decreases in 1 minute. (Time adjustment range: 01-60min, recyclable)

Note 1: if the product starts to operate and is heating, you can still adjust the time and temperature.

D. Start/cancel

After determining the temperature and time required for the cooking food, please press the "start/cancel"  icon on the operating panel. The display screen will every 5 sec display the temperature and time alternately (from time to start)

If you need to turn off the appliance halfway, you can turn it off manually. To do this, press the "start /cancel "button on the operation panel. If you need to continue again after, please operate the buttons and adjust it according to the above mentioned steps.)

E. Stirring function

When you need to use the stirring function, please assemble the stirring blade, close the upper cover and adjust the corresponding temperature and time, after press the "start /cancel"  icon, and then press the "stirring "button. Then the corresponding stirring indicator light will light up for a long time. When the cooking is finished, the stirring blade is removed with the frying basket. Due to high temperature inside, precaution of scalding during operation

F. Preheating function

If you want to preheat, please set the cooking time and temperature first, then press the "stirring" button. At this time, the preheating indicator light will light up. After press the "start/cancel "button and the air fryer will work for 5 minutes and keep the preheating state. After the preheating is completed, put in foods, close the upper cover of the air fryer. Press the "start /cancel" button again, and the appliance enters the working state.

Note:

- a. When the appliance is done, you will hear a sound of "tick" 5 times, which is indicating that the appliance has finished the set time. The interface will display "00 min". The fan will stop working after 45 sec. After the cooking is finished take the basket out from the air fryer, and then place it on the heat-resistant surface (Note: if you do not exit to the main interface, then a buzzer will sound one time every 2 minutes)
- b. When opening the appliance, the main working parts of the appliance such as stirring, fan and heating tube will be cut off. The control panel will keep working and will continue to work after closing the cover.

OPERATING INSTRUCTIONS

★Before first use

- A. Remove all the packaging materials.
- B. Take out the grill and frying basket and remove the packaging bags.
- C. Clean the grill and frying basket with warm water, wipe the inside and outside of the air fryer with a wet cloth immersed in detergent, when it is completely dry then it is ready for use.

- D. Place the air fryer on an even and stable surface.
- E. There should be enough space around the air fryer to ensure that its surface to other items is kept at a distance of at least 10 cm. Do not place anything in front the air outlet.

Note:

For the first time, it is necessary to preheat the air fryer for 5 minutes in order to remove the residual oil and smoke.

There may be bad smell when used for the first time, this is normal.

★Operating instructions step-by-step:

- A. Place grill into the frying basket and the frying basket into the frying pan. Equip the stirring blade onto to the stirring shaft if you need the stirring function.
- B. Put food into the frying basket and make sure that the food does not exceed the height of the frying basket.
- C. Close the air fryer cover and plug into the power supply. The operation panel has sound and indicator light.
- D. Press "function" button, select the independent mode or the default menu mode.
- E. The time and temperature can be adjusted in the independent mode. The default menu has the set time and temperature.
- F. After the setting is completed, press the "start /cancel" button.
- G. According to your need to press "stirring" button, to start the stirring function, at this time the stirring indicator light will keep lighting.
- H. If you need to finish the cooking ahead of time, press "start / cancel" button.
- I. After the cooking is complete, a buzzer sound will be heard. Press the open button and take out the food. For oiled food, it is advised to take the grill and frying basket and stirring blade out together, to prevent oil spill. In the process of using the air fryer, please pay attention to scalding.

Tips:

- ※ For better cooking, it is recommended to preheat for 5 minutes before use.
- ※ Some of the foods can be wrapped by foil for better cooking results.
- ※ Time can be adjusted according to personal tastes. Observe from the window to avoid food getting scorched.
- ※ Clean up the grill and basket after every use, to avoid burning smoke or affect the appearance of the food next time using the air fryer.

CLEANING AND CARE

- A. Before cleaning the air fryer, please cut off the power and unplug the appliance, and wait until it has cooled down completely.
- B. If there is oil on the air fryer, please wipe it with a soft damp cloth immersed with mild detergent.

- C. Grill pan, frying basket, stirring blade and other accessories can be taken out and cleaned in water.
- D. Do not immerse the whole appliance/body in water or other liquid to clean, to avoid the danger of electric shock or functional failure.
- E. After cleaning, wait until the accessories are dried and put them in a cool and dry place.

TROUBLESHOOTING GUIDE

Problem	Possible Cause(s)	Resolution(s)
Air fryer does not work	The appliance is not plugged in	Insert the plug into an appropriate grounded power socket
	Did not start	Start operation control panel
The ingredients fried in the fryer are not completely cooked	Too many ingredients were used	Place ingredients by batch into the fry basket
	The cooking temperature is too low	Set temperature control button at required temperature
	The cooking time is too short	To fry for a longer time
The food is fried unevenly	While cooking without stirring	Need ideal stirring
Fried snacks are not crisp	Used not the traditional ingredients	Use snacks designed to be baked in a traditional oven, or lightly brush some olive onto the snacks
Cannot slide the frying basket into the appliance properly	Frying basket handle is not placed correctly	Install the frying basket properly, adjust the height of foods, place ingredients according to required capacity
	There are ingredients in the air fryer	
	There is too much food in frying basket cannot close	
White smoke is coming out of the appliance	You are frying greasy foods	It is normal when you are preparing greasy ingredients in an air fryer, large amounts of oil can smoke
	The grill pan contains greasy residue from previous uses	Make sure you clean the grill pan properly after each use

Stirring blade not working	Stirring blade was not properly constructed with synchronous motor	Press button, reconstruct it
	Stirring function not started	Check the status of stirring function
	The baked ingredients are too large, stirring blade blocked	Adjust the size of ingredients, start again
Display screen shows "E01"	Temperature sensor open ended	Contact the place of purchase.
Display screen shows "E02"	Temperature sensor short circuit	Contact the place of purchase.
When finish or cancel, the fan does not stop timely	Fan has 45 seconds shut down cycle to protect the appliance	It is normal, after 45 seconds the fan will shut down automatically

TECHNICAL DATA

Article No. 10034393

220-240V, 50/60 Hz

Max. Power: 1800 watt